


ASSEMBLING DRAWING FOR RATCHET LINK--LOW SERIES

2LOW、4LOW、8LOW、14LOW、30LOW SERIES

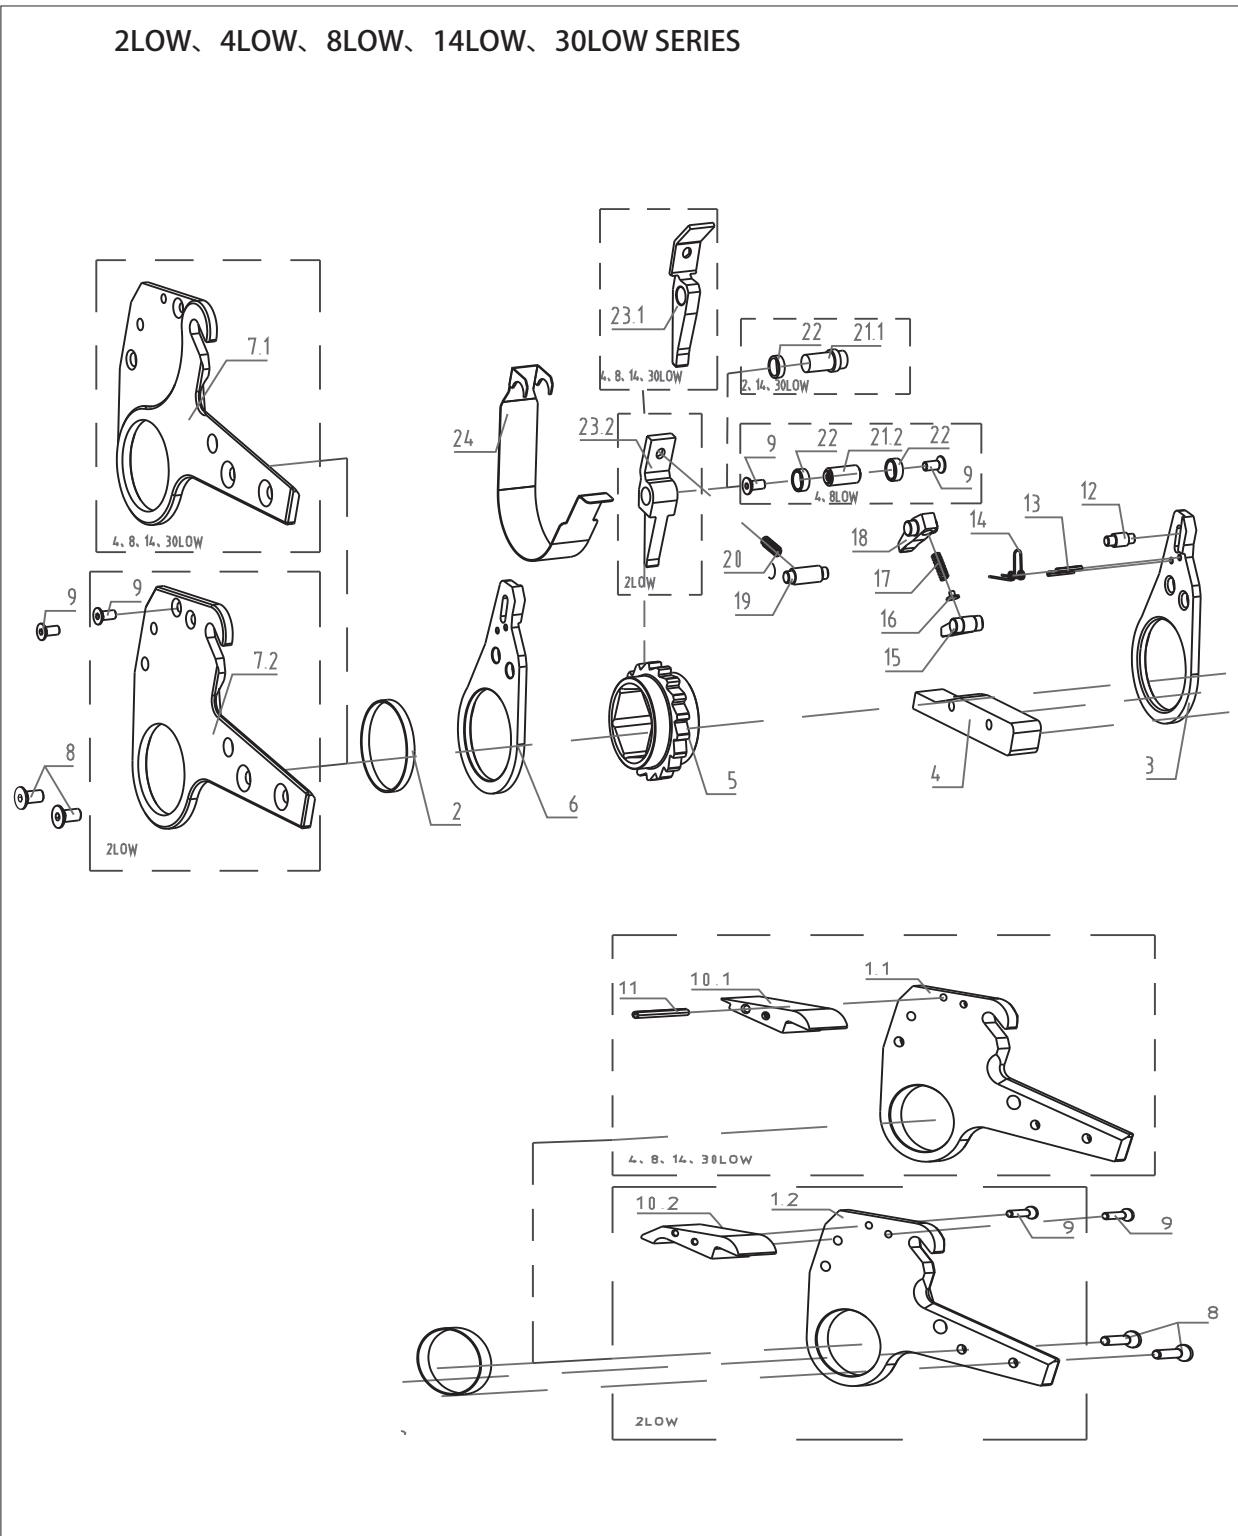


## PARTS LIST FOR RATCHET LIINK---LOW SERIES

	Model Number	2LOW	4LOW	8LOW	14LOW	30LOW
Item	Name	Quantity	Quantity	Quantity	Quantity	Quantity
1a	Side Plate(Left)		1	1	1	1
1b						
2	Copper Belt				2	2
3	Drive Plate(Right)	1	1	1	1	1
4	Reaction Block	1	1	1	1	1
5	Ratchet Spline	1	1	1	1	1
6	Drive Plate(Left)	1	1	1	1	1
7a	Side Plate(Right)		1	1	1	1
7b		1				
8	Reaction Block Screw	4	4	4	4	4
9	Screw(Reaction Pawl Bushing And Top Spacer)	4	4	4	2	2
10a	Top Spacer		1	1	1	1
10b		1				
11	Roll Pin for Top Spacer		1	1	1	1
12	Drive Pin for Drive Plate	1	1	1	1	1
13	Roll Pin for Drive Plate	2	2	2	2	2
14	Drive Pin Spring	1	1	1	1	1
15	Drive Pawl	1	1	1	1	1
16	Spring Seat	1				
17	Compressed Spring	1	1	1	1	1
18	Drive Pawl Primary	1	1	1	1	1
19	Pin for Side Plate	1	1	1	1	1
20	Compressed Spring for Reaction Pawl	1	1	1	1	1
21a	Shaft of Rotation	1			1	1
21b			1	1		
22	Reaction Pawl Bushing	1	2	2	1	1
23a	Reaction Pawl		1	1	1	1
23b		1				
24	Shroud	1	1	1	1	1

## LOW Series Hydraulic Torque Wrench

### DRAWING FOR POWER HEAD WITH SWIVEL ON TOP AND PART LIST-LOW SERIES

#### 2LOW, 4LOW, 8LOW, 14LOW, 30LOW SERIES

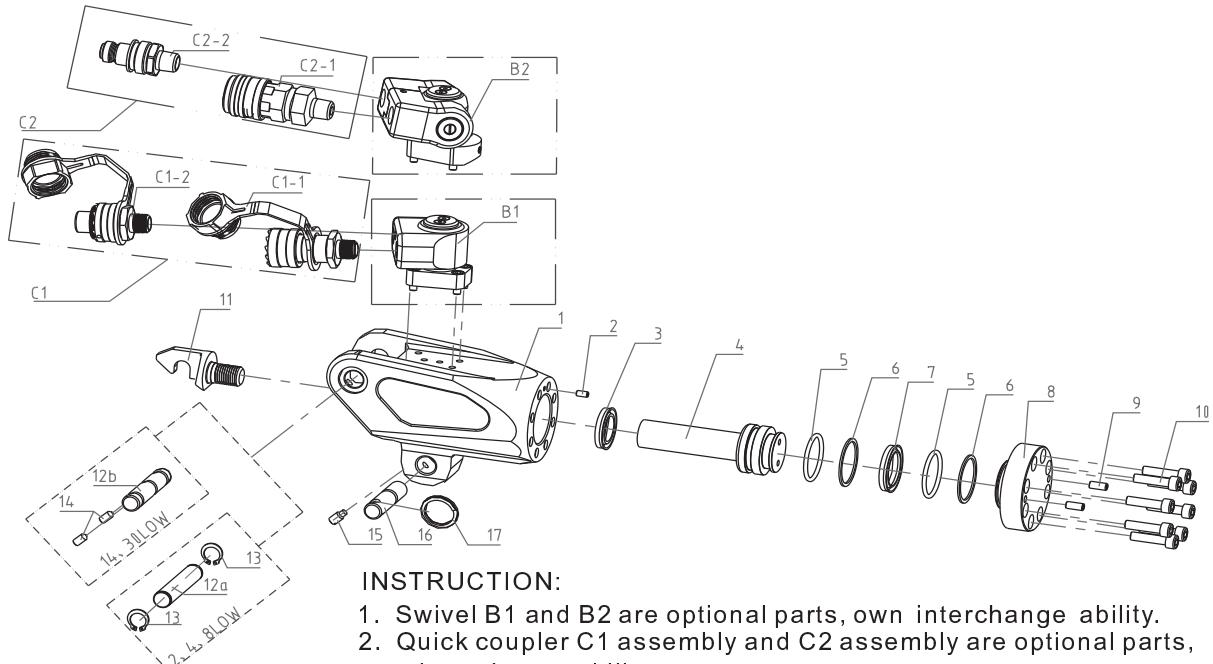

Model Number		2LOW	4LOW	8LOW	14LOW	30LOW
Item	Name	Quantity	Quantity	Quantity	Quantity	Quantity
1	Body	1	1	1	1	1
2	Casing Cap of Body	1		1	1	1
3	U-Ring for Body	1	1	1	1	1
4	Piston Rod	1	1	1	1	1
5	O-Ring for Piston Rod and End Cap	2	2	2	2	2
6	Retaining Ring for Piston Rod and End Cap	1	2	2	2	2
7	U-Ring for Piston Rod	1	1	1	1	1
8	End Cap	1	1	1	1	1
9	End Cap Screw		2	2	2	2
10	Screw of Body	8	8	8	8	8
11	Rod End	1	1	1	1	1
12a	Fixed Pin Upper		1	1		
12b					1	1
13	Retaining Ring for Fixed Pin Upper	2	2	2		
14	Screw for Fixed Pin Upper				2	2
15	Screw with Spring	1	1	1	1	1
16	Link Pin	1	1	1	1	1
17	Draw Ring	1	1	1	1	1
B1	Swivel		1	1	1	1
B2			1	1		
C1-1	Male Coupler	1	1	1	1	1
C2-1		1	1	1	1	1
C1-2	Female Coupler	1	1	1	1	1
C2-2		1	1	1	1	1


#### INSTRUCTION:

1. Swivel B1 and B2 are optional parts, own interchange ability.
2. Quick coupler C1 assembly and C2 assembly are optional parts, own interchange ability.

## LOW Series Hydraulic Torque Wrench

### DRAWING FOR POWER HEAD WITH SWIVEL IN BACKSIDE AND PART LIST-LOW SERIES

2LOW、4LOW、8LOW、14LOW、30LOW SERIES

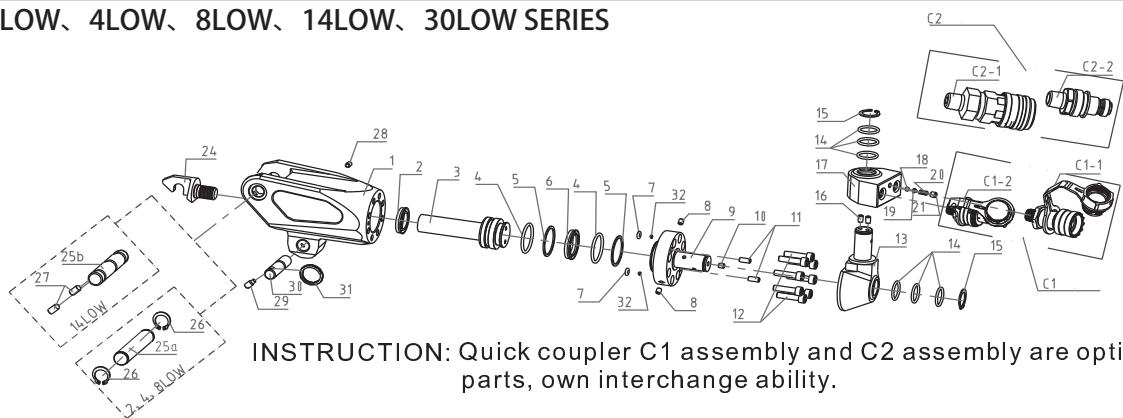

Model Number		2LOW	4LOW	8LOW	14LOW
Item	Name	Quantity	Quantity	Quantity	Quantity
1	Body	1	1	1	1
2	U-Ring for Body	1	1	1	1
3	Piston Rod	1	1	1	1
4	O-Ring for Piston Rod and End Cap	2	2	2	2
5	Retaining Ring for Piston Rod and End Cap	1	2	2	2
6	U-Ring for Piston Rod	1	1	1	1
7	O-Ring for End Cap	2	1	1	2
8	Screw of Side End Cap	2	1	1	2
9	End Cap	1	1	1	1
10	Screw of Top End Cap	2	1	1	2
11	End Cap Screw		2	2	2
12	Screw of Body	8	8	8	8
13	Swivel	1	1	1	1
14	O-Ring for The Swivel	6	6	6	6
15	Retainer Ring for The Swivel	2	2	2	2
16	Screw for The Swivel	4	2	2	4
17	Swivel Joint	1	1	1	1
18	Steel Ball	1	1	1	1
19	Spring Pedestal	1	1	1	1
20	Spring	1	1	1	1
21	Plug	1	1	1	1
24	Rod End	1	1	1	1
25a	Fixed Pin Upper	1	1	1	
25b					1
26	Retaining Ring for Fixed Pin Upper	2	2	2	
27	Screw for Fixed Pin Upper				2
28	Screw	2	1	1	1
29	Screw with Spring	1	1	1	1
30	Link Pin	1	1	1	1
31	Draw Ring	1	1	1	1
32	Copper Gasket	2			
C1-1	Male Coupler	1	1	1	1
C2-1		1	1	1	1
C1-2	Female Coupler	1	1	1	1
C2-2		1	1	1	1

INSTRUCTION:quick coupler c1 assembly and c2 assembly are optional parts, own interchange ability.